

USER MANUAL

Timing set – comfort with cascade

ZPCP14-K



File: 2016-01-04

PRODUCT SUPPORT
Pawel Ciechanowski
p.ciechanowski@polanik.com



ATTENTION!

The product is an electronic device and it requires careful handling!

1. General use

ZPCP14-K comfort set with cascade is the timing system enriched with an additional photocell. It is significantly more accurate than the set with one photocell, because the time of the competitor is recorded when two infrared beams are tripped at the same time. The set measures the times with the resolution up to 1/1000 s. The shot from the staring revolver initiates the timing of the chronometer which can record up to 2000 results. Thanks to the thermal printer of the chronometer the results can be printed out.



POLANIK Poland, Życzliwa 11 97-300 Piotrków Trybunalski tel. +48 44 646 44 81 tel. +48 44 648 50 89 fax +48 44 646 43 58 e-mail: info@polanik.com www.polanik.com



2. Set elements


Set elements				
Product code	Description	Pcs	Image	
FP	sports photocell with power adaptor and cable to connect with chronometer	2	Training Services	
UFP-2	cascade holder	1	Harrie Harrison	
LFP-2	double reflector	1		
ST	tripod	2		
CHR	chronometer	1		
RS-START9	starting revolver	1		
PNB-150	start signal cable 150 m on spool	1	's polarik	

POLANIK Poland, Życzliwa 11 97-300 Piotrków Trybunalski tel. +48 44 646 44 81 tel. +48 44 648 50 89 fax +48 44 646 43 58 e-mail: info@polanik.com www.polanik.com



3. Assembly of the set

The example of the wiring the set is presented below.

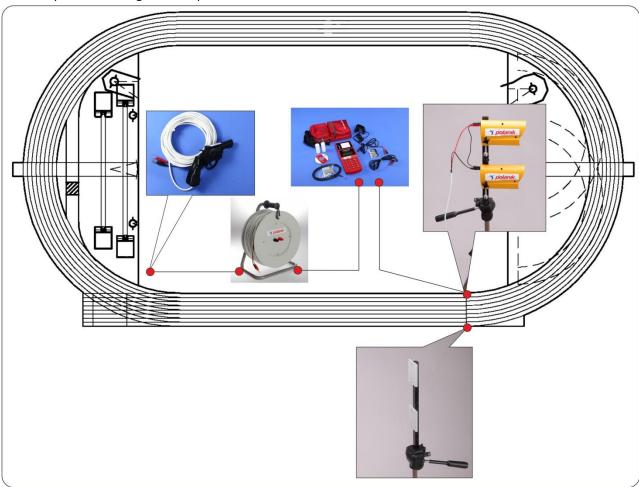

At the start line the starter fires the starting revolver RS-START9, which is connected with the chronometer CHR through the 150 m cable PNB-150. At the finish line the two sports photocells FP are screwed to the cascade holder UFP-2 and mounted on the tripod ST. they are connected to the chronometer CHR. The photocells are pointed to the double reflector LFP-2 mounted on the tripod ST.

4. Maintenance

The set elements are precision instruments, so they require careful handling. When the set is not used it should be stored in a dry roofed place.

POLANIK Poland, Życzliwa 11 97-300 Piotrków Trybunalski tel. +48 44 646 44 81 tel. +48 44 648 50 89

fax +48 44 646 43 58

e-mail: info@polanik.com www.polanik.com



5. Declaration

1) No. 2016-01-04

2) Issuer's name:

POLANIK

Issuer's address:

Zyczliwa 11, 97-300 Piotrkow Tryb.

3) Object of declaration:

No.	Description of goods	Code
1	Timing set - comfort with cascade	ZPCP14-K

	i			
4) The object of declaration described above is in conformity with the requirements of the technical company norms.				
5) Declaration for:	Additional Information			
5, 200, 410, 101, 101, 101, 101, 101, 101, 1	Buyer/Distributor/User			
Signed for and in behalf of:				
POLANIK 2016-01-04 Piotrkow Tryb. (Date and place of issue)				
6) Pawel Ciechanowski Product Manager	Colonda			

(Name, function) (Signature or equivalent authorized by the issuer)